

yes



**Your family, friends or
colleagues will love you
for this amazingly fast
4G connection.**



What's in the box?



Zoom 4G Gateway



Ethernet Cable




Power Cord



Standee



Setting up the product

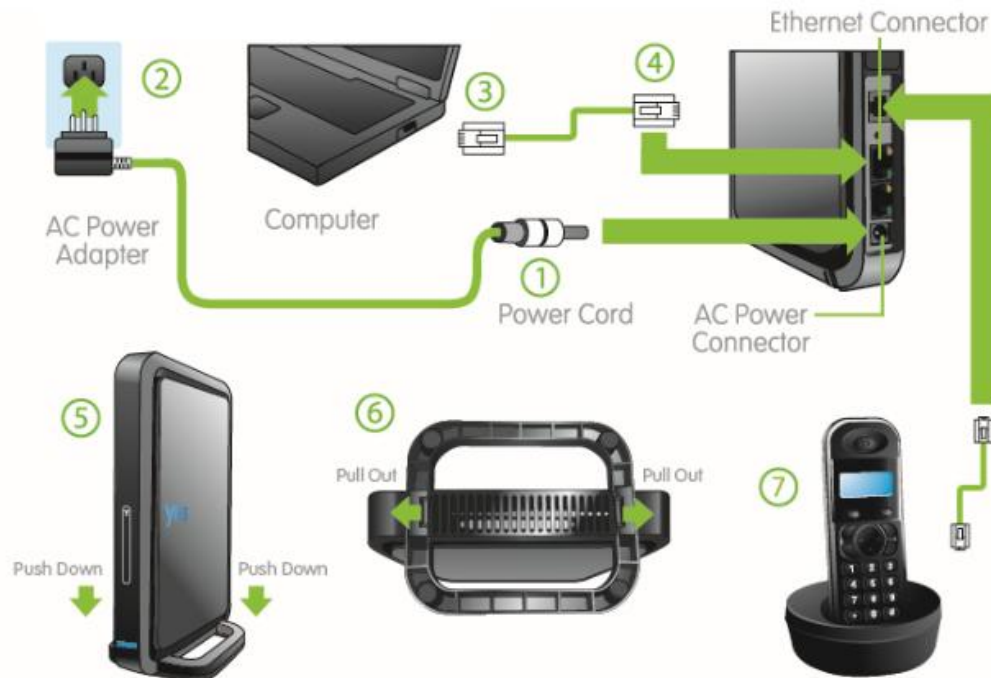


1. Insert the power cord to the Zoom.
2. Plug in the AC power adapter to an available wall socket and switch power on.
3. Insert one end of the LAN cable to your computer.
4. Insert the other end of the LAN cable to the Zoom.
5. Click your Zoom into its standee to get better reception.
6. Push button hooks by following arrow shown above to remove standee easily.
7. Finally, plug in your analog phone to enjoy the voice service.



First time start up

1. Type <http://192.168.1.1> into the address bar of your browser while connected to the Zoom via Wi-Fi or LAN

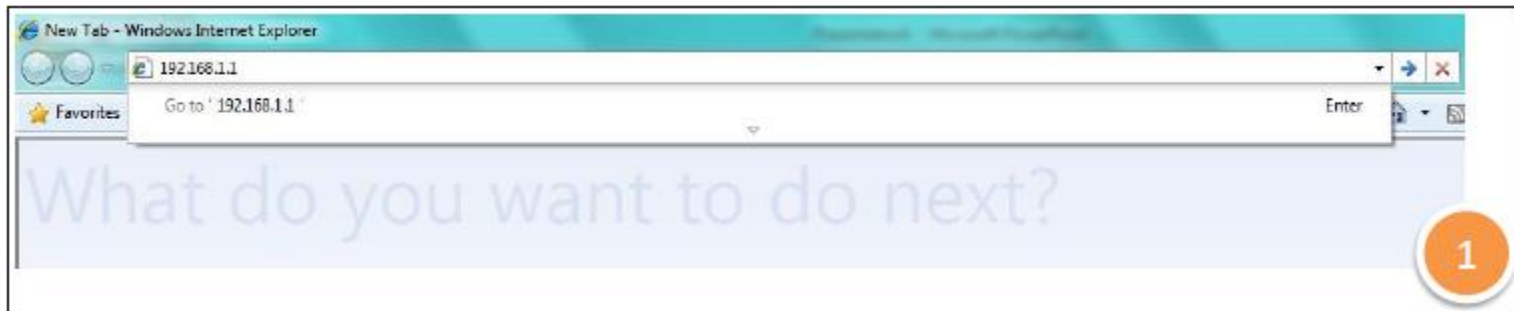

2. The default password of the device is **admin**.

Connect to your Zoom by entering the device password.

Password

By default, the device password is "admin". It can be changed in Management Settings.

LOGIN

A screenshot of a web page for connecting to a Zoom device. It features a heading "Connect to your Zoom by entering the device password.", a "Password" label next to a text input field, and a green "LOGIN" button. Below the input field is a note: "By default, the device password is 'admin'. It can be changed in Management Settings." An orange circle with the number "2" is in the top right corner of the page.



3. You may change your device password. Or choose **Ask Again Later** to change it at a later time.

Please create a device password.
This password is used to access the settings on your Zoom.

Password

Confirm Password

You can change it later in [Management Settings](#).

3 **Ask Again Later** **Save Password**



4. Click **Basic Setup**.
5. Key in your Yes ID / Password.
6. Change your Wi-Fi Network Name (SSID) and secure it with a password. **Click Review and save.**

zoom WiFi 📶 📶 📶 yes

4 Basic Setup

Status
WiFi
VoIP
Network
Firewall
Management

Basic Setup > Confirmation > Complete

Create and edit your basic Zoom settings.

1 Step 1 : Setup your Yes ID and Password

Yes ID:
Example : yesid@yes.my

Password:
Your Yes ID's Password

Password Confirmation:

2 Step 2 : Configure broadcast and name Your Network

Network Name(SSID):

SSID Broadcast: Enable

Security: Use Wi-Fi Security (WPA-Personal)

5

6

Reboot
Logout
Reconnect



7. Review settings, once confirmed click **Save**.

The screenshot displays the Zoom web interface. At the top left is the 'zoom' logo. On the right, there are icons for WiFi, a refresh symbol, a signal tower, and a signal strength indicator, followed by the 'yes' logo. A navigation breadcrumb shows 'Basic Setup > Confirmation > Complete'. The main content area is titled 'Create and edit your basic Zoom settings.' and lists the following configuration details:

- Yes ID: factory@yes.my
- Password: *****
- SSID: Yes Zoom - C8B431
- SSID Broadcast: Yes
- Security Type: WPA
- Key Pass Phrase: 1234567890

At the bottom of the main content area, there are two green buttons: 'Edit' and 'Save'. The 'Save' button is highlighted with a red circle containing the number 7, indicating the step to be performed. On the left side, there is a sidebar menu with the following items: 'Basic Setup' (highlighted), 'Status', 'WiFi', 'VoIP', 'Network', 'Firewall', and 'Management'. At the bottom left, there are three buttons: 'Reboot', 'Logout', and 'Reconnect'.



CONGRATULATIONS!

You have successfully installed and configured the Zoom!

More information

Terms & conditions and warranty statement
www.yes.my/v3/legal.do

Technical support
www.yes.my/support
or email yescare@yes.my