

Front




ZOOM 4G LTE Quick Start Guide

What's in the box?



yes Zoom 4G LTE Ethernet Cable Power Adapter

Setting up the product

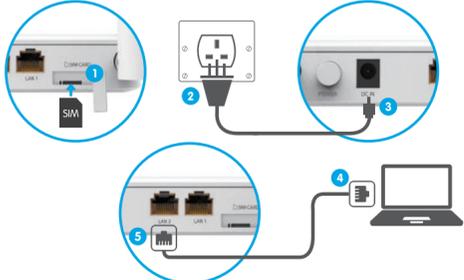

1. Insert SIM as shown
2. Plug in the power adapter to an available wall socket
3. Connect power adapter to the Zoom 4G LTE and push the power button
4. Insert one end of the Ethernet cable to your computer
5. Insert the other end of the Ethernet cable to the Zoom 4G LTE

Connecting to your Zoom 4G LTE



1. With your computer WiFi turned on, view the list of available WiFi networks
2. Refer to back of device, select **Yes4G Zoom LTE - xxxx** or **Yes4G Zoom LTE 5GHz - xxxx** and key in the WiFi password as stated
- To change WiFi SSID and password, please proceed to the following section

Back

CONGRATULATIONS!

You are now connected to the
Yes 4G LTE network

More Information

Terms & Conditions + Warranty Statement
www.yes.my/tnc

Technical Support
www.yes.my/support/contact-us
Or email yescare@yes.my

Two easy ways to manage your Zoom 4G LTE

Any web browser from your favorite computer
- OR -
Our brand new Yes Device Manager App

Setup using web browser



1. Enter **http://192.168.1.1** into the address bar while connected to the Zoom 4G LTE WiFi hotspot
2. The default password is **admin**
3. Follow on-screen instructions to complete the setup

Setup using Yes Device Manager



1. Scan the QR code or download "Yes Device Manager" on Google Play
2. Connect to the WiFi Hotspot of the Zoom 4G LTE
3. Launch and enjoy using our app!